











ASSEMBLY INSTRUCTION

IMPORTANT NOTE:

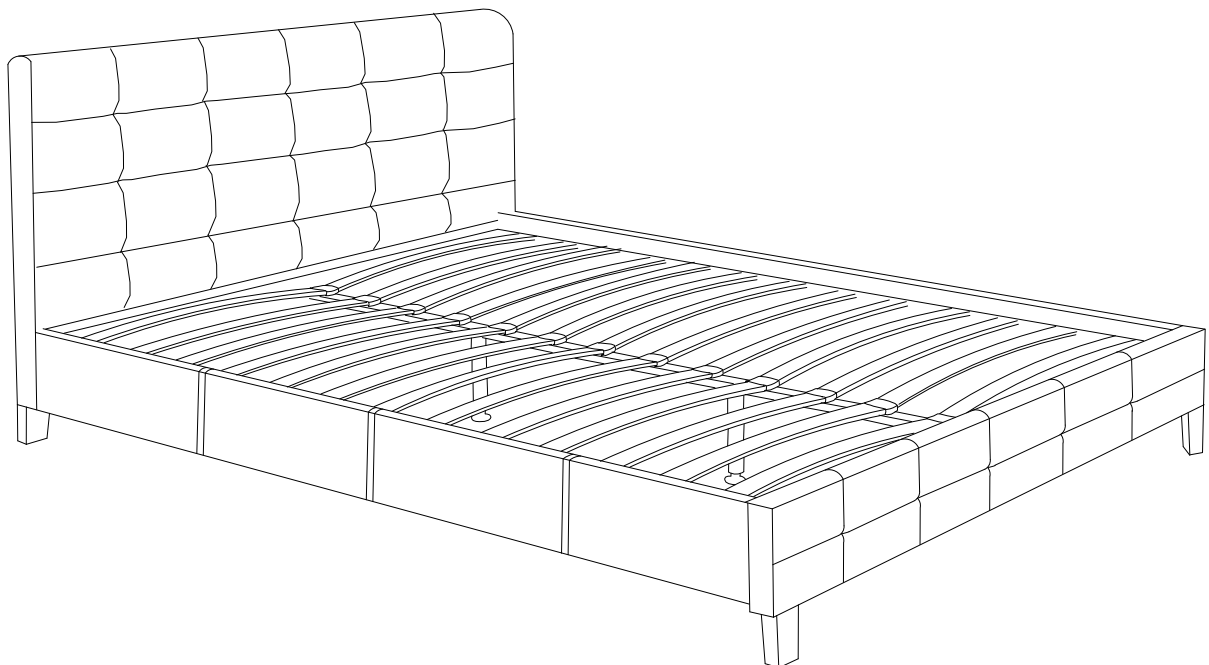



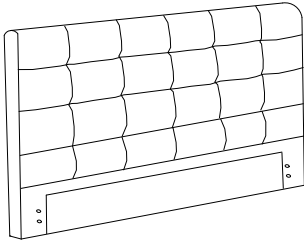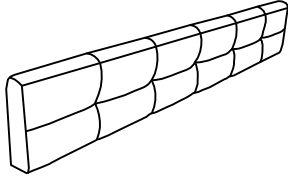


- ** PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ** BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ** DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY SET-UP.



PARTS IDENTIFICATION


<p>A: HEADBOARD 1PCS</p> 	<p>B: FOOTBOARD 1PCS</p> 	<p>C: SIDE RAIL 2PCS</p> 
<p>D: DOUBLE PLASTIC CAP 13PCS</p> 	<p>E: CENTRE SUPPORT BAR 1PCS</p> 	<p>F: SUPPORT LEG 2PCS</p> 
<p>G: SLAT 26PCS</p> 	<p>H: SINGLE PLASTIC CAP 26PCS</p> 	<p>I: FOOT 4PCS</p> 

HARDWARE IDENTIFICATION


<p>J: NUT M8*13mm 4PCS</p> 	<p>K: SPRING WASHER 20PCS</p> 	<p>L: WASHER 20PCS</p> 
<p>M: ALLEN KEY 1PCS</p> 	<p>N: SPANNER 1PCS</p> 	<p>O: SCREW M8*30mm 16PCS</p> 
<p>P: SCREW M8*80mm 4PCS</p> 		

ASSEMBLY INSTRUCTION


STEP 1: FIX THE FEET TO THE FOOTBOARD

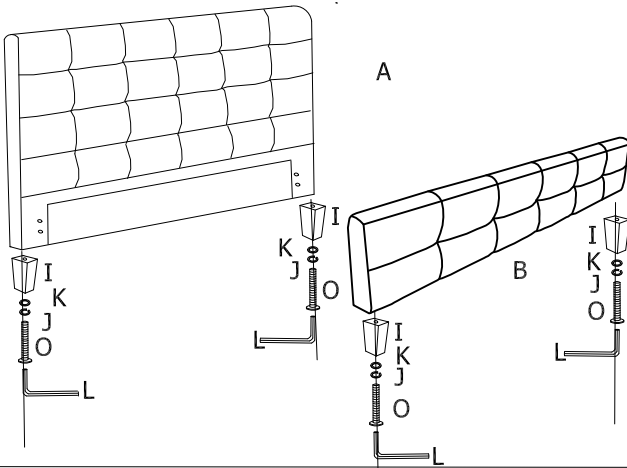


STEP 2: FIX SUPPORT LEGS TO CENTRE SUPPORT BAR.

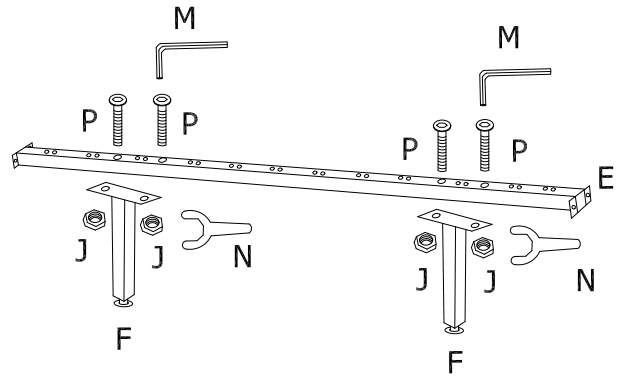


STEP 3: FIX SIDE RAILS TO HEADBOARD.

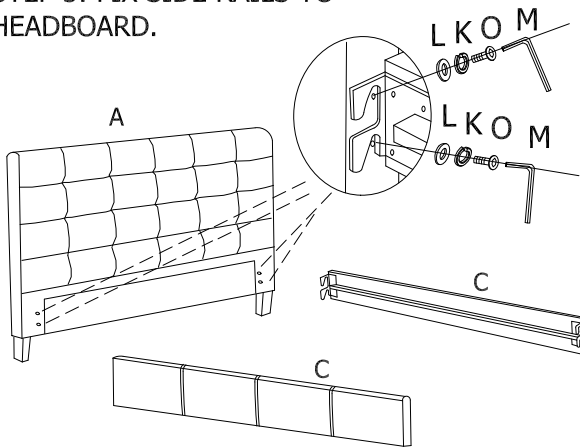


STEP 4: FIX SIDE RAILS TO FOOTBOARD.

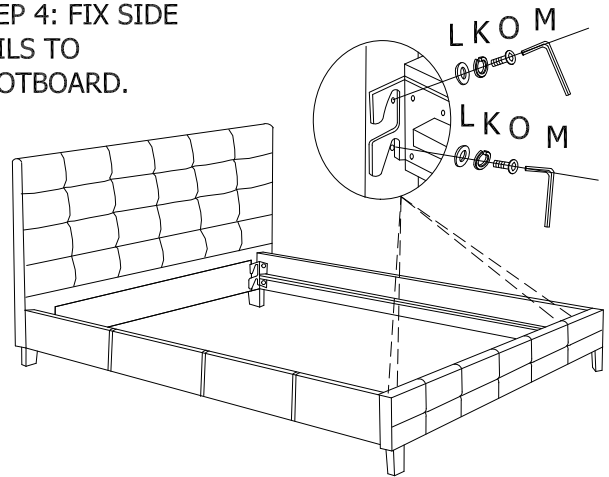

STEP 5: FIX CENTRE SUPPORT BAR TO HEADBOARD.

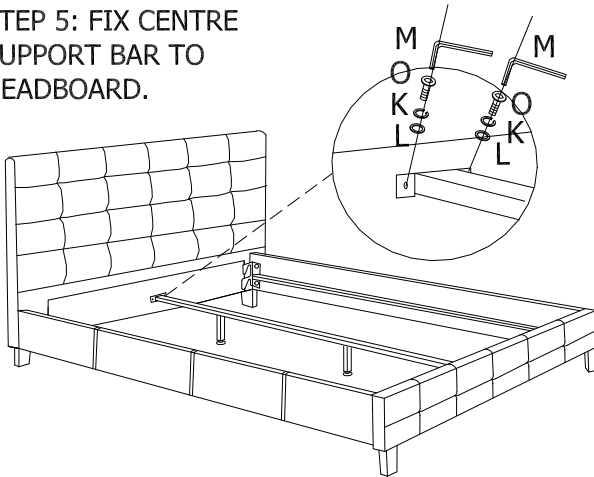

STEP 6: FIX CENTRE SUPPORT BAR TO FOOTBOARD.

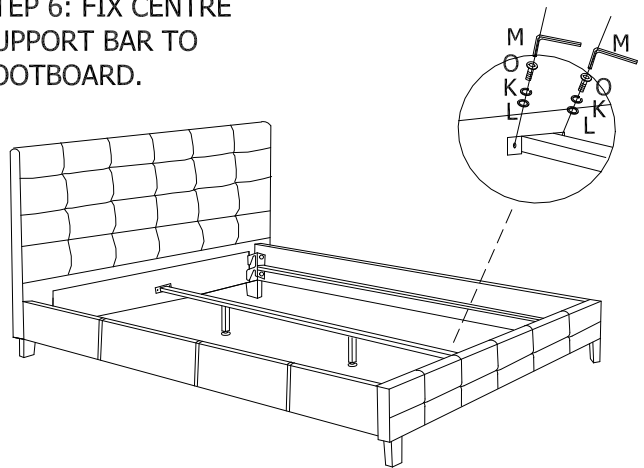

STEP 7: FIX PLASTIC CAPS AND SLATS.

